 
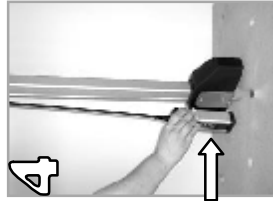 
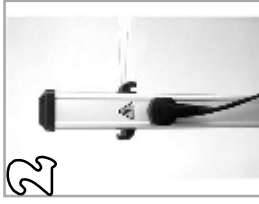 


### Battery Operation

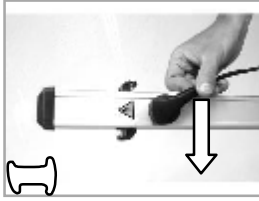 


Green: operational  
 Red: when flashing red, operation for approx. 2 more hours is possible

# User Instructions

## RoFlexs Powered Premium System

with integrated energiser

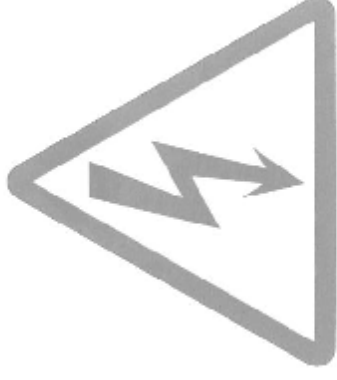

Thank you for trusting us by buying RoFlexs products. The products have been manufactured based on strictest quality standards, ensuring the equipment will work faultlessly.

**The RoFlexs Powered Premium Post has been designed for operation with RoFlexs Products. The Post will energise a minimum of 10 RoFlexs fence posts. The maximum number is subject to customer test.**

**Advice for assembling and turning on**

1. Before operation the complete fence must be assembled.
2. Insert the magnetic brad into the top of the post. Connect the power supply unit (12 V) or charged battery to the post
3. Switch on by removing the magnetic brad from the top of the post. Operation is indicated when the LED blinks green.

**Advice for turning off**

1. Shutdown of the pasture fence unit by inserting the magnetic brad.
2. Release the power clips taking care not to touch the metal or tape, and dispose of any residual charge by contacting the tape clip onto the metal of the post..



**Safety Instructions**

Powered Posts must be earthed at all times!  
Inserting the ground spear into the ground = earthing

The RoFlexs posts are isolated and protected against electric charge. Only the fence tapes are conducting.

**Care Instructions**

Clean the contacts on the power clip and power port regularly with a dry cloth.

**Procedure in case of failure:**

LED display does not shine / does not blink green:

- check the setting of all connections
- check the setting of the magnetic brad, by re- inserting and remove it
- check the power source

